

TX-5300/TX-5500 JUMPER SETTING

- **JP4 : For CR open/close status port selection**
Pin 1-3 、 2-4 Short: For COM1
Pin 3-5 、 4-6 Short : For COM5
- **JP2 : COM1/COM2 12V DC SUPPLY SELECT**
Pin 1-3 Short : COM1 Pin1 connected to 12V
Pin 3-5 Short : COM1 Pin1 connected to DCD
Pin 2-4 Short : COM2 Pin1 connected to 12V
Pin 4-6 Short : COM2 Pin1 connected to DCD
- **JP3 : COM3/COM4 12V DC SUPPLY SELECT**
Pin 1-3 Short : COM3 Pin1 connected to 12V
Pin 3-5 Short : COM3 Pin1 connected to DCD
Pin 2-4 Short : COM4 Pin1 connected to 12V
Pin 4-6 Short : COM4 Pin1 connected to DCD
- **JP1 : COM5/COM6 12V DC SUPPLY SELECT**
Pin 1-3 Short : COM5 Pin1 connected to 12V
Pin 3-5 Short : COM5 Pin1 connected to DCD
Pin 2-4 Short : COM6 Pin1 connected to 12V
Pin 4-6 Short : COM6 Pin1 connected to DCD
- **J80PORT1 : For debug function**
Pin 1-2 Short : Disable 80 port show message
Pin 2-3 Short : Enable 80 port show message
- **JCMOS1 : CMOS Select**
Pin 1-2 Short : Normal
Pin 2-3 Short : Clear CMOS
- **JME1 : Update vPro BIOS settings**
Pin 2-3 Short : EnMEable security measures defined in the Flash Descriptor
Pin 1-2 Short : Disable Flash Descriptor Security (override)
- **COM1~COM6 : +5V through BIOS ; VGA +12V through BIOS**
Press F2 to access Advanced/OEM IO Configuration
VGA DSUB 12V : Disabled
COM1 DB9 5V : Disabled
COM2 DB9 5V : Disabled
COM3 DB9 5V : Disabled
COM4 DB9 5V : Disabled
COM5 DB9 5V : Disabled
COM6 DB9 5V : Disabled

